


PHASER Manual

Analog phase box for guitarists

Operating Instructions

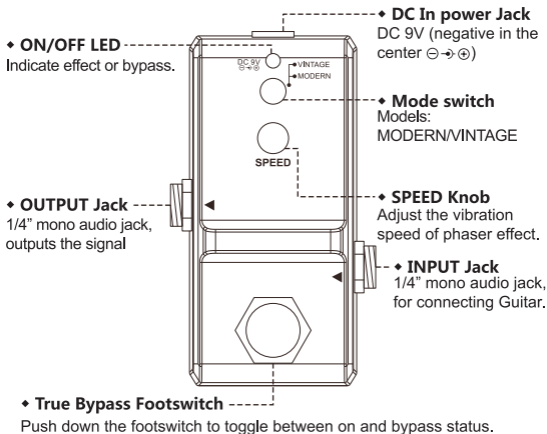


Specifications

- ◆ Working Current: 22mA
- ◆ Dimensions: 75(d)*36(w)*26(h) mm
- ◆ Weight: 133g

PHASER 说明书

模拟移相效果单块

操作说明

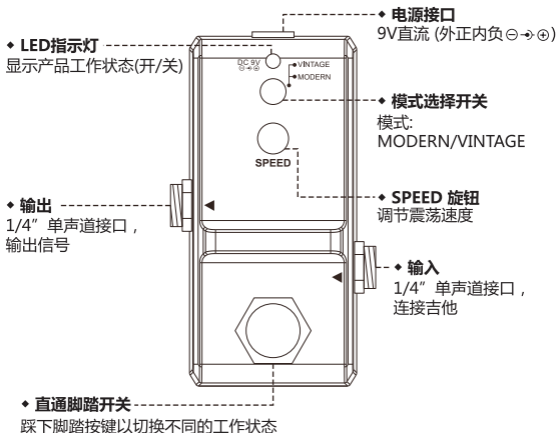

规格参数

- ◆ 工作电流:22mA
- ◆ 尺寸:75(d)*36(w)*26(h) mm
- ◆ 重量133克